

MEASURING GUIDE FOR OUTDOOR BAMBOO BLINDS

Measuring for your Outdoor Bamboo Blinds for decks, patios and pergolas is a simple process in principle. But if your situation is more complex and you need help, email us a photo via our website (address below) so we can help you with the measurements.

The sizes you supply are the overall blind sizes and we will work out the deductions to make everything fit within this space. The roller of the blind and all components will fit inside the dimensions you give us.

ITEMS YOU WILL NEED


1. Tape measure (metal is best).
2. A printout of this sheet, if possible, to record the dimensions in the table (see overleaf). Or a blank sheet of paper.
3. Pen (to record measurements).
4. A smart phone (to photograph the measurements for emailing to us).

FACE FIT, REVEAL/RECESS FIT OR CEILING MOUNT


Outdoor Bamboo Blinds can be fitted in 3 ways (see diagrams below):

1. onto the face (Face Fit) of your wall or post
2. to the inside of a recess or between posts (Reveal or Recess Fit)
3. to the underside of a ceiling or beam (Ceiling Mount).

Face Fit (On Face of Post)

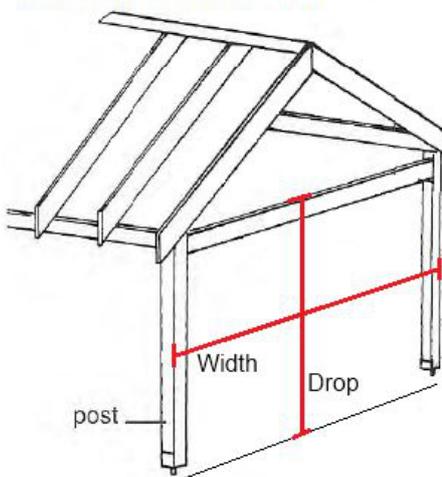

Reveal Fit (Between Posts)

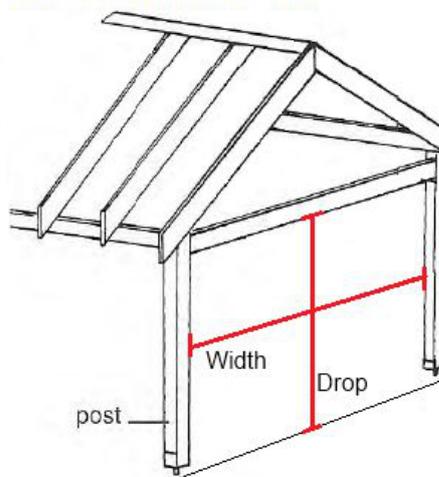

NOTE: We recommend measuring each opening in 3 different positions for the width and the drop. For the width - measure the top, centre, and bottom, and for the drop - measure left, centre and right.



MEASUREMENT RECORD SHEET - FACE FIX ONLY

For installing your outdoor blind to hang outside the window/post recess, covering the total area including the frame from top to bottom and side to side.

Step 1: Measure from outside edge of post to outside edge of post (see diagram page 1). If 2 blinds are required, side by side, measure from the centre of one post to centre of the other post or if being mounted on the wall measure your opening size and add a minimum of 50mm each side (100mm total). This is your width. Note this measurement in the table below.

Step 2: Measure from the highest possible point on your face to the floor or handrail. This is your Drop. Note this measurement in the table below.

Please provide measurements to the nearest mm to ensure a perfect fit. Now measure again to check your measurements are correct. It's also a good idea to get someone to check the measurements for you.

| FACE FIX (enter measurements into unshaded boxes only) | | | | | | | |
|--|-------|-----|--------|--------|------|--------|-------|
| Blind No. | MM | TOP | CENTRE | BOTTOM | LEFT | CENTRE | RIGHT |
| 1 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 2 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 3 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 4 | WIDTH | | | | | | |
| | DROP | | | | | | |



MEASUREMENT RECORD SHEET - RECESS FIX ONLY

For installing your outdoor blind to fit inside the opening.

Step 1: Measure from the top of your opening to either the floor or handrail (depending on where you want your blind to stop). This is your drop. Note this measurement.

Step 2: If measuring between posts take measurement from the inside of one post to the inside of the other. This is your width. Note this Measurement.

Please provide inside measurement to the nearest mm to ensure a perfect fit. Now measure again to check your measurements are correct. It's also a good idea to get someone to check the measurements for you. Please write clearly in black pen and email your form to us via our website (address below). If you'd like to be sent materials samples, include the request in your email.

| RECESS FIX (enter measurements into unshaded boxes only) | | | | | | | |
|--|-------|-----|--------|--------|------|--------|-------|
| Blind No. | MM | TOP | CENTRE | BOTTOM | LEFT | CENTRE | RIGHT |
| 1 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 2 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 3 | WIDTH | | | | | | |
| | DROP | | | | | | |
| 4 | WIDTH | | | | | | |
| | DROP | | | | | | |



MEASUREMENT RECORD SHEET - CEILING MOUNT ONLY

For mounting your outdoor blind to the underside of a top beam or from the ceiling - ideal when there are no side posts or walls.

Step 1: With a pencil make a mark, left and right, on your beam or ceiling to indicate the width you want your blind to be. Measure the space between the two marks. This is your width. Note this measurement.

Step 2: Measure from your ceiling or top beam to the hand rail or floor (depending on where you want your blind to stop). This is your drop. Note this measurement.

Please provide inside measurement to the nearest mm to ensure a perfect fit. Now measure again to check your measurements are correct. It's also a good idea to get someone to check the measurements for you. Please write clearly in black pen and email your form to us via our website (address below). If you'd like to be sent materials samples, include the request in your email.

| CEILING MOUNT (enter measurements into unshaded boxes only) | | | | | |
|---|-------|-------|------|--------|-------|
| | MM | WIDTH | LEFT | CENTRE | RIGHT |
| 1 | WIDTH | | | | |
| | DROP | | | | |
| 2 | WIDTH | | | | |
| | DROP | | | | |
| 3 | WIDTH | | | | |
| | DROP | | | | |
| 4 | WIDTH | | | | |
| | DROP | | | | |

